


COMPACT LITE CART ASSEMBLY INSTRUCTIONS

CODE	PART	QTY G36	QTY G44	QTY G48
BAG KIT				
GC	Ground cord	1	1	1
WI	Wheel Insert	4	4	4
N	Nuts	4	4	4
S	Screws	20	24	24
C	Screw cover	4	4	4
DW	Domed washer	4	4	4
STAND PARTS				
LC	Long crossmember	6	8	8
F	Fixtures	3	4	4
P	Plant trays	6	4	8
R	Slide rods	2	2	2
SC	Short crossmember	2	2	2
E	End frames	2	2	2
W	Wheels	4	4	4

1. Assemble short cross members **SC** between bottom legs of end frame **E** using the screws **S**, keeping all holes facing the same direction (outside to inside--not up to down). Repeat this step on other end frame **E**.
2. Insert a screw **S** in top hole of end frame **E**. Hang the slide rods **R** over screw. Put a domed washer **DW** on screw with indented side towards the slide rod. Screw on the nut **N**, and tighten. Place a screw cover **C** on the end of the screw.
3. Place another screw **S** through hole on the bottom short cross member **SC** and through the middle of the slide rod **R**.
4. Put a domed washer **DW** on the screw with indented side towards the slide rod **R**, then screw on a nut **N**. Place a screw cover **C** on the end of the screw. Repeat steps 2-4 for other rod.
5. Place the wheel inserts **WI** in the bottom of the end frames **E**. Install the wheels **W**.
6. Place a screw **S** through the hole of the end frames **E** and then into the end of the long cross member **LC**, making sure the long cross member **LC** is on the same side as the slide rods **R**, (this should be on the inside of the unit when finished) and tighten with a flat head screwdriver. Repeat this step for the rest of the long cross members **LC**.
7. Place plant trays **P** on the long cross members **LC**.
8. Remove the tubes from the fixture(s) **F** before installing.
9. Adjust the fixture(s) **F** to the desired height and tighten knobs **SECURELY**.
(**Important**: Adjusting fixtures more than 6" per side at once may cause fixture to bend.)

G36/G48

G44

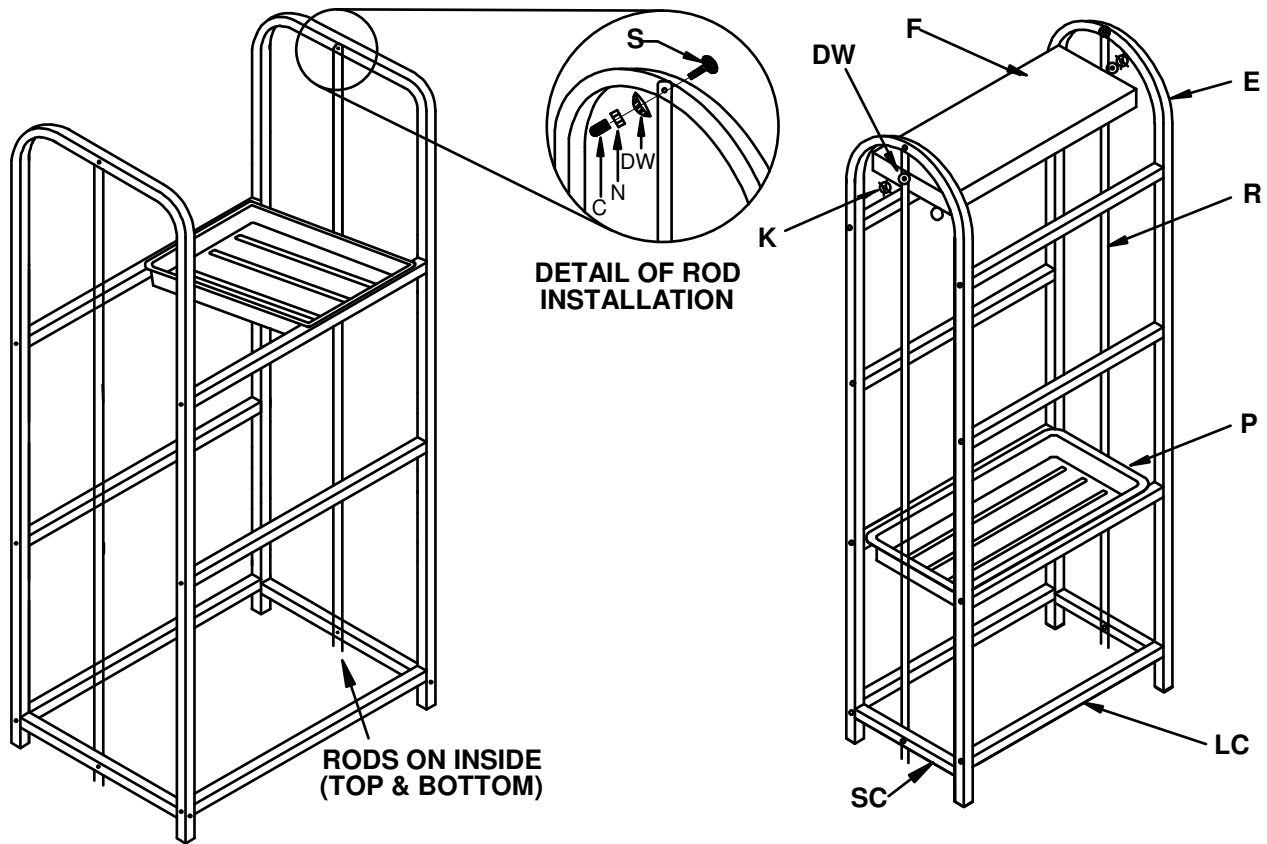

CODE	PART	CODE	PART
WI	Wheel insert	S	Screws
N	Nuts	P	Plant trays
E	End frames	R	Slide rods
SC	Short crossmember	DW	Domed washers
LC	Long crossmember	C	Black screw cover
K	Knob	F	Fixture

To Prevent Electrical Shock: Connect the eyelet of the enclosed ground cord to any bolt head. The other end should be connected to a ground point such as a water pipe or center screw of a grounded outlet. Please disconnect fixtures when watering plants.